



Recommended tightening torque

for ER clamping nuts

Hi-Q®/ER clamping nuts														
Collet size	Ø [mm]	Ø [inch]	ER/ERC		ERB/ERBC		ERM/ERMC		ERMX/ERMXC		ERAX/ERAXC		ER MS	
			ER*	ER-GB	ER*	ER-GB	ER*	ER-GB	ER*	ER-GB	ER*	ER-GB	Collets [Nm]	Collets [Nm]
ER 8 MB	0.2–0.9	0.0078–0.035	—	—	—	—	6	—	6	—	—	—	6	0
ER 8	1.0–5.0	0.039–0.196	—	—	—	—	6	—	6	—	—	—	6	0
ER 11 MB	0.2–0.9	0.0078–0.035	8	—	—	—	8	—	8	—	8	—	8	0, I
ER 11	1.0–2.9	0.039–0.098	8	8	—	—	8	8	8	8	8	8	10	0, I
	3.0–7.0	0.118–0.256	24	16	—	—	16	13	16	13	24	21	10	0, I
ER 16 MB	0.2–0.9	0.0078–0.035	8	—	—	—	8	—	8	—	8	—	12	0, I
ER 16	1.0	0.039	8	—	6.4	—	8	—	8	—	8	—	12	0, I
	1.5–3.5	0.059–0.138	20	—	16	—	20	—	20	—	20	—	20	0, I
	4.0–4.5	0.157–0.177	40	40	32	32	24	—	24	—	40	40	20	I, II
	5.0–10.0	0.197–0.394	56	44	56	44	24	—	24	—	40	40	—	II
ER 20	1.0	0.039	16	—	12	—	16	—	16	—	16	—	12	0, I
	1.5–6.5	0.059–0.256	32	32	24	24	28	28	28	28	52	35	18.4	I, II
	7.0–13.0	0.276–0.512	80	35	80	24	28	28	28	28	52	35	18.4	I, II
ER 25	1.0–3.5	0.059–0.138	24	—	20	—	24	—	24	—	24	—	—	I, II
	4.0–4.5	0.157–0.177	56	56	48	48	32	32	32	32	56	56	—	I, II
	5.0–7.5	0.196–0.295	80	80	72	72	32	32	32	32	80	80	—	II, III
	8.0–17.0	0.315–0.669	104	80	104	79	32	32	32	32	80	80	—	II, III
ER 32	2.0–2.5	0.078–0.098	24	24	20	—	—	—	—	—	24	—	—	I, II
	3.0–7.5	0.118–0.291	136	136	128	90	—	—	—	—	104	90	—	II, III
	8.0–22.0	0.315–0.787	136	136	136	90	—	—	—	—	104	90	—	II, III
ER 40	3.0–26.0	0.118–1.023	176	176	176	176	—	—	—	—	128	128	—	II, III
ER 50	6.0–36.0	0.236–1.417	240	300	240	300	—	—	—	—	—	—	—	III

* Includes ER standard and ER-UP.



for micRun clamping nuts

micRun® clamping nuts

Collet size	\varnothing [mm]	\varnothing [inch]	micRun® collets [Nm]				TORCO-FIX	
			MR/MRC		MMR / MRMC			
			MR	MRC	MMR	MRMC		
MR 11	1.0–2.9	0.039–0.098	8	8	–	–	0, I	
	3.0–7.0	0.118–0.256	16	16	–	–	0, I	
MR 16	1.0	0.039	8	8	8	8	0, I	
	1.5–3.5	0.059–0.138	20	20	20	20	0, I	
	4.0–4.5	0.157–0.177	40	40	24	24	I, II	
	5.0–10.0	0.197–0.394	56	56	24	24	I, II	
MR 25	1.0–3.5	0.059–0.138	24	24	–	–	I	
	4.0–4.5	0.157–0.177	56	56	–	–	I, II	
	5.0–7.5	0.196–0.295	80	80	–	–	II, III	
	8.0–17.0	0.315–0.669	104	80	–	–	II, III	
MR 32	2.0–2.5	0.078–0.098	24	24	–	–	0, I	
	3.0–22.0	0.118–0.2917	136	136	–	–	II, III	

Size [mm]

D2	d	D1	D2	D3	D4	L	Measurements [mm]				Drawing
							L1	L2	L3	L4	
MR 11	1.0–2.0	11.5	11	9.5	5	18	3.8	2	2.5	9	1
MR 11	3.0–6.35	11.5	11	9.5	–	18	3.8	2	2.5	–	2
MR 16	1.0	17	16	13.8	7.5	27.5	6.26	2.7	4	13	1
MR 16	2.0–4.0	17	16	13.8	7.5	27.5	6.26	2.7	4	10	1
MR 16	5.0–10.0	17	16	13.8	–	27.5	6.25	2.7	4	–	2
MR 25	1.0	26	25	22	12	34	6.66	3.1	5	18	1
MR 25	2.0–6.35	26	25	22	12	34	6.66	3.1	5	15	1
MR 25	8.0–16.0	26	25	22	–	34	6.66	3.1	5	–	2
MR 32	2.0–4.0	33	32	29.2	15	40	7.2	3.6	5.5	20	1
MR 32	5.0–6.35	33	32	29.2	15	40	7.2	3.6	5.5	15	1
MR 32	8.0–20.0	33	32	29.2	–	40	7.2	3.6	5.5	–	2

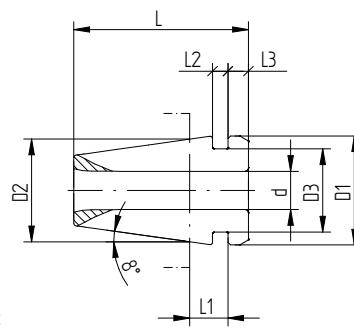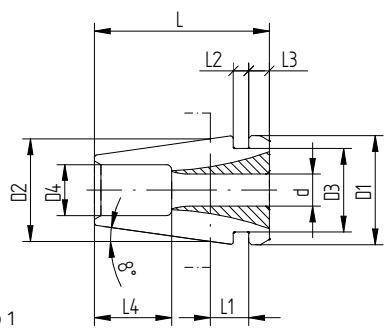


Increase collet and tool life

Optimize your surface finishes and extend tool life by minimizing occurring vibrations during machining.


Always assemble correctly

First, clip the collet in the nut. Second, insert the tool shank more than $\frac{2}{3}$ into the collet.

1.

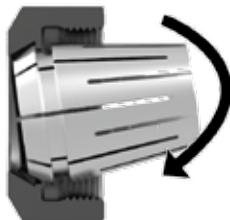

2.

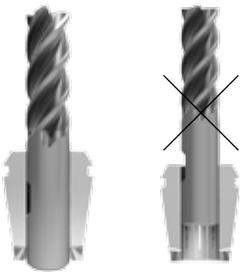

Listen to the click

Do not tighten the torque wrench further after the first click is heard.



Get your TORCO-FIX.

Only use REGO-FIX wrenches

To mount the collet in the toolholder please use one of these special wrenches. Preferably the torque wrench, as they display the amount of applied force.



Regular wrenches can also be used. Be aware that only the torque wrench will display the exact amount of applied force, making it the most exact tool to mount colletholders professionally.

Never use any extensions nor hammers

